

- ▶อย่าล้มผู้จันตัดจนกว่าจะเย็นลง ขณะทำงาน งานตัดจะร้อนมาก
- ▶ถอดงานตัดออกก่อนขยับเครื่องมือไฟฟ้า ทั้งนี้เพื่อหลีกเลี่ยงความเสียหาย
- ▶เมื่อใช้เครื่องขัดมุ่งทำงาน ให้ใช้กระบังป้องกันอันตราย แผ่นนำร่องตัด และอุปกรณ์คุ้มฝุ่นออก ร่วมด้วยหลีกเลี่ยงการตัดร่องลึกเครื่องห้องทำงานในทิศทางตรงกันข้ามกับการหมุนเลนอ มิฉะนั้นเครื่องอาจถูกดันออกจากร่องตัดโดยควบคุมไม่ได้
- ▶ถ้าอนุญาตให้ตัดเมียกได้ ต้องให้น้ำอย่างต่อเนื่อง
- ▶ดึงปลั๊กไฟของเครื่องมือไฟฟ้าออกจากเด้าเลี่ยงก่อนเปลี่ยนงานตัด
- ▶เลือกงานตัดที่เหมาะสมกับวัสดุที่ใช้งาน
- ▶ตรวจสอบให้แน่ใจว่าทิศทางหมุนของลูกศรบนงานตัดตรงกับทิศทางหมุนของเครื่องมือไฟฟ้า
- ▶ใช้ใบตัดสำหรับการตัดแบบแห้งเท่านั้นเมื่อใช้งานร่วมกับเครื่องเจียรไฟฟ้า
- ▶หน้าแปลนต้องมีเส้นผ่าศูนย์กลางอย่างน้อย 1 ใน 3 ของเส้นผ่าศูนย์กลางใบตัด
- ▶ถอดแหวนลดอุณหภูมิเมื่อใช้งานตัดหินอ่อน
- ▶ใส่แหวนลดเมื่อใช้งานเจียร/งานขัด
- ▶สำหรับการตัดเมียก ให้ใช้เฉพาะเครื่องมือไฟฟ้าที่อนุญาตให้ตัดเมียกได้เท่านั้น และปฏิบัติตามคำแนะนำของเครื่องมือไฟฟ้าอย่างเคร่งครัด

Bahasa Indonesia
Petunjuk keselamatan kerja untuk mata potong keramik intan


- ▶ Mata potong keramik dapat mempertajam sendiri. Jika pekerjaan makan waktu semakin lama dan terjadi lingkaran bunga api, maka ini adalah tanda bahwa mata potong keramik telah menjadi tumpul. Asah mata potong dengan memotong pendek di bahan abrasif (misalnya pasir). Pemicu ketidaktepatan adalah pada jenis pengerajan batu dan tidak runcing.
- ▶ Jangan menyentuh mata potong keramik, sebelum telah didinginkan. Cakram menjadi sangat panas selama penggunaanya.
- ▶ Bacalah buku petunjuk dari power tool.
- ▶ Bersihkan penjejit, poros dan mata potong keramik secara teratur.
- ▶ Perhatikan pengukuran pada mata potong keramik. Lubang di mata potong keramik harus sesuai dengan flensa pemasangan dan tidak boleh diperpanjang.
- ▶ Pastikan bahwa kecepatan pemotongan yang diizinkan setidaknya sama dengan kecepatan maksimum alat.
- ▶ Periksalah dahulu mata potong keramik sebelum menggunakan. Mata potong harus dipasangkan dengan benar dan harus bisa berputar dengan bebas. Lakukan uji coba paling sedikit selama 30 detik tanpa pembebanan. Jangan gunakan mata potong keramik yang rusak, tidak bulat atau bergetar.
- ▶ Hanya gunakan cakram pemotong untuk pemotongan kering saat digunakan dengan gerinda sudut.
- ▶ Jangan mendorong atau memiringkan mata potong keramik selama pemotongan abrasif. Gunakan alat seperlunya, tingkat pemotongan material disesuaikan dengan benar. Hindari alat dari pukulan dan jangan dibanting.
- ▶ Lepaskan cincin reduksi untuk pengoperasian pemotong marmer.
- ▶ Gunakan cincin reduksi untuk pengoperasian gerinda sudut.
- ▶ Saat pemotongan basah hanya gunakan power tool yang dapat digunakan untuk pemotongan basah dan ikuti petunjuk dari power tool ini
- ▶ Bekerjalah hanya di sudut kanan dan pada poros lurus. Pemotongan melengkung dan miring dapat menyebabkan retakan di inti atau kerusakan segmen.

1 609 92A 8MS (2023.04) 0/8

Robert Bosch Power Tools GmbH
70538 Stuttgart
GERMANY
www.bosch-professional.com



BOSCH

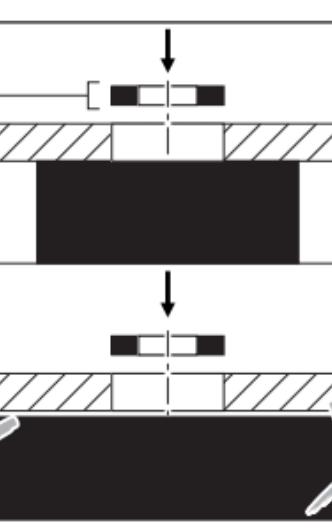

English

Safety Warnings for Diamond Cutting Discs

- ▶ Read the manual of the power tool.
- ▶ Regularly clean the clamping set, spindle and cutting disc.
- ▶ Pay attention to the dimensions of the cutting disc. The bore in the cutting disc must match the backing flange and must under no circumstances be enlarged.
- ▶ Ensure that the permitted maximum speed of the cutting disc matches at least the maximum speed of the power tool.
- ▶ Check the cutting disc before using it. The cutting disc must be mounted properly and be able to rotate freely. Carry out a test run for at least 30 seconds with no load. Do not under any circumstances use damaged, out-of-round or vibrating cutting discs.
- ▶ Do not press or tilt the cutting disc during cutting. Work with moderate feed adapted to the material being cut. Avoid hard initial contact or stabbing.
- ▶ Do not overload the cutting discs because overloaded cutting discs quickly become dull. Take breaks when dry cutting to allow the disc to cool.
- ▶ Work only at a right angle and in a straight axis. Curved cuts and tilting can lead to cracks in the core or segment breaks.
- ▶ The cutting discs are self-resharpening. A noticeably decreasing work rate and sparking all around the rim of the disc are indications of a cutting disc that has become dull. In this case, sharpen the cutting disc by making short cuts in abrasive material (e. g. sandstone). Sporadic sparking is normal when working on stone and is therefore not a problem.
- ▶ Do not touch cutting discs until they have cooled down. The cutting discs become very hot whilst working.

- ▶ Remove the cutting disc before transporting the power tool in order to prevent damage.

Always feed the power tool against the direction of rotation of the disc. Otherwise it may be pressed out of the cut in an uncontrolled manner.

- ▶ If wet cutting is allowed, make sure that the water supply is uninterrupted.
- ▶ Pull the mains plug of the power tool out of the socket before changing the cutting disc.

Choose a cutting disc suitable for the material to be worked.

- ▶ Only use the cutting disc for dry cutting when using it with an angle grinder.

Flanges should have at least 1/3 of cutting disc diameter.

- ▶ Remove reduction ring for marble cutter application.

Use reduction ring for angle grinder application.

- ▶ For wet cutting only use power tools which allow wet cutting and strictly follow the instructions of this power tool.

- ▶ Use a protective guard, cutting guide and dust extraction device when working with angle grinders. Avoid making deep cuts. Always feed the power tool against the direction of rotation of the disc. Otherwise it may be pressed out of the cut in an uncontrolled manner.

切勿使切割片的规格。切割片上的钻孔必须和固定法兰完全吻合，绝不允许扩大。

- ▶ If wet cutting is allowed, make sure that the water supply is uninterrupted.

用损坏、变形或会振动的切割片。

- ▶ Pull the mains plug of the power tool out of the socket before changing the cutting disc.

避免硬放和碰撞。

- ▶ Choose a cutting disc suitable for the material to be worked.

仅在直角和直轴时进行操作。圆弧切割和切割片倾斜会导致核心断裂或条块折断。

- ▶ Ensure that the arrow directions on the cutting disc and on the power tool match.

切割片可以自动打磨。如果切割片的切割效率明显降低，而且进行切割时会出现火花环，则表示切割片已经变钝。如果发生上述情况，可以把切割片在研磨材料（比如砂石）上来回切割数次。岩石加工过程中产生零星火花是典型现象，因此并不危险。

- ▶ Only use the cutting disc for dry cutting when using it with an angle grinder.

Flanges should have at least 1/3 of cutting disc diameter.

- ▶ Remove reduction ring for marble cutter application.

在切割片尚未冷却之前，切勿持握切割片。切割片在工作时会变得很热。

- ▶ Use reduction ring for angle grinder application.

如果允许湿式切割，应确保持续供水。

- ▶ For wet cutting only use power tools which allow wet cutting and strictly follow the instructions of this power tool.

- ▶ Remove the cutting disc before transporting the power tool in order to prevent damage.

请确保切割片所允许的最高转速至少与电动工具的最高转速相匹配。

- ▶ Open the power tool before use. Check whether the cutting disc is correctly installed. It must be able to rotate freely. Perform a test run for at least 30 seconds without load. Do not use damaged, deformed or vibrating cutting discs.

开机前，先检查是否已经正确地安装好切割片。必须正确安装切割片，使其可以自由转动。进行至少30秒钟的无负载试机。切勿使

- ▶ If wet cutting is allowed, make sure that the water supply is uninterrupted.

用损坏、变形或会振动的切割片。

- ▶ Pull the mains plug of the power tool out of the socket before changing the cutting disc.

避免硬放和碰撞。

- ▶ Choose a cutting disc suitable for the material to be worked.

仅在直角和直轴时进行操作。圆弧切割和切割片倾斜会导致核心断裂或条块折断。

- ▶ Ensure that the arrow directions on the cutting disc and on the power tool match.

切割片可以自动打磨。如果切割片的切割效率明显降低，而且进行切割时会出现火花环，则表示切割片已经变钝。如果发生上述情

- ▶ Only use the cutting disc for dry cutting when using it with an angle grinder.

况，可以把切割片在研磨材料（比如砂石）上来回切割数次。岩石加工过程中产生零星火花是典型现象，因此并不危险。

- ▶ Flanges should have at least 1/3 of cutting disc diameter.

在切割片尚未冷却之前，切勿持握切割片。切割片在工作时会变得很热。

- ▶ Remove reduction ring for marble cutter application.

如果允许湿式切割，应确保持续供水。

- ▶ Use reduction ring for angle grinder application.

如果允许湿式切割，应确保持续供水。

- ▶ For wet cutting only use power tools which allow wet cutting and strictly follow the instructions of this power tool.

- ▶ Remove the cutting disc before transporting the power tool in order to prevent damage.

请确保切割片所允许的最高转速至少与电动工具的最高转速相匹配。

- ▶ Open the power tool before use. Check whether the cutting disc is correctly installed. It must be able to rotate freely. Perform a test run for at least 30 seconds without load. Do not use damaged, deformed or vibrating cutting discs.

开机前，先检查是否已经正确地安装好切割片。必须正确安装切割片，使其可以自由转动。进行至少30秒钟的无负载试机。切勿使

- ▶ If wet cutting is allowed, make sure that the water supply is uninterrupted.

用损坏、变形或会振动的切割片。

- ▶ Pull the mains plug of the power tool out of the socket before changing the cutting disc.

避免硬放和碰撞。

- ▶ Choose a cutting disc suitable for the material to be worked.

仅在直角和直轴时进行操作。圆弧切割和切割片倾斜会导致核心断裂或条块折断。

- ▶ Ensure that the arrow directions on the cutting disc and on the power tool match.

切割片可以自动打磨。如果切割片的切割效率明显降低，而且进行切割时会出现火花环，则表示切割片已经变钝。如果发生上述情

- ▶ Only use the cutting disc for dry cutting when using it with an angle grinder.

况，可以把切割片在研磨材料（比如砂石）上来回切割数次。岩石加工过程中产生零星火花是典型现象，因此并不危险。

- ▶ Flanges should have at least 1/3 of cutting disc diameter.

在切割片尚未冷却之前，切勿持握切割片。切割片在工作时会变得很热。

- ▶ Remove reduction ring for marble cutter application.

如果允许湿式切割，应确保持续供水。

- ▶ Use reduction ring for angle grinder application.

如果允许湿式切割，应确保持续供水。

- ▶ For wet cutting only use power tools which allow wet cutting and strictly follow the instructions of this power tool.

- ▶ Remove the cutting disc before transporting the power tool in order to prevent damage.

请确保切割片所允许的最高转速至少与电动工具的最高转速相匹配。

- ▶ Open the power tool before use. Check whether the cutting disc is correctly installed. It must be able to rotate freely. Perform a test run for at least 30 seconds without load. Do not use damaged, deformed or vibrating cutting discs.

开机前，先检查是否已经正确地安装好切割片。必须正确安装切割片，使其可以自由转动。进行至少30秒钟的无负载试机。切勿使

- ▶ If wet cutting is allowed, make sure that the water supply is uninterrupted.

用损坏、变形或会振动的切割片。

- ▶ Pull the mains plug of the power tool out of the socket before changing the cutting disc.

避免硬放和碰撞。

- ▶ Choose a cutting disc suitable for the material to be worked.

仅在直角和直轴时进行操作。圆弧切割和切割片倾斜会导致核心断裂或条块折断。

- ▶ Ensure that the arrow directions on the cutting disc and on the power tool match.

切割片可以自动打磨。如果切割片的切割效率明显降低，而且进行切割时会出现火花环，则表示切割片已经变钝。如果发生上述情

- ▶ Only use the cutting disc for dry cutting when using it with an angle grinder.

况，可以把切割片在研磨材料（比如砂石）上来回切割数次。岩石加工过程中产生零星火花是典型现象，因此并不危险。

- ▶ Flanges should have at least 1/3 of cutting disc diameter.

在切割片尚未冷却之前，切勿持握切割片。切割片在工作时会变得很热。

- ▶ Remove reduction ring for marble cutter application.

如果允许湿式切割，应确保持续供水。

- ▶ Use reduction ring for angle grinder application.

如果允许湿式切割，应确保持续供水。

- ▶ For wet cutting only use power tools which allow wet cutting and strictly follow the instructions of this power tool.

- ▶ Remove the cutting disc before transporting the power tool in order to prevent damage.

请确保切割片所允许的最高转速至少与电动工具的最高转速相匹配。

- ▶ Open the power tool before use. Check whether the cutting disc is correctly installed. It must be able to rotate freely. Perform a test run for at least 30 seconds without load. Do not use damaged, deformed or vibrating cutting discs.

开机前，先检查是否已经正确地安装好切割片。必须正确安装切割片，使其可以自由转动。进行至少30秒钟的无负载试机。切勿使

- ▶ If wet cutting is allowed, make sure that the water supply is uninterrupted.

用损坏、变形或会振动的切割片。

- ▶ Pull the mains plug of the power tool out of the socket before changing the cutting disc.

避免硬放和碰撞。

- ▶ Choose a cutting disc suitable for the material to be worked.

仅在直角和直轴时进行操作。圆弧切割和切割片倾斜会导致核心断裂或条块折断。

- ▶ Ensure that the arrow directions on the cutting disc and on the power tool match.

切割片可以自动打磨。如果切割片的切割效率明显降低，而且进行切割时会出现火花环，则表示切割片已经变钝。如果发生上述情

- ▶ Only use the cutting disc for dry cutting when using it with an angle grinder.

况，可以把切割片在研磨材料（比如砂石）上来回切割数次。岩石加工过程中产生零星火花是典型现象，因此并不危险。

- ▶ Flanges should have at least 1/3 of cutting disc diameter.

在切割片尚未冷却之前，切勿持握切割片。切割片在工作时会变得很热。

- ▶ Remove reduction ring for marble cutter application.

如果允许湿式切割，应确保持续供水。

- ▶ Use reduction ring for angle grinder application.

如果允许湿式切割，应确保持续供水。

- ▶ For wet cutting only use power tools which allow wet cutting and strictly follow the instructions of this power tool.

- ▶ Remove the cutting disc before transporting the power tool in order to prevent damage.

请确保切割片所允许的最高转速至少与电动工具的最高转速相匹配。

- ▶ Open the power tool before use. Check whether the cutting disc is correctly installed. It must be able to rotate freely. Perform a test run for at least 30 seconds without load. Do not use damaged, deformed or vibrating cutting discs.

开机前，先检查是否已经正确地安装好切割片。必须正确安装切割片，使其可以自由转动。进行至少30秒钟的无负载试机。切勿使

- ▶ If wet cutting is allowed, make sure that the water supply is uninterrupted.

用损坏、变形或会振动的切割片。

- ▶ Pull the mains plug of the power tool out of the socket before changing the cutting disc.

避免硬放和碰撞。

- ▶ Choose a cutting disc suitable for the material to be worked.

仅在直角和直轴时进行操作。圆弧切割和切割片倾斜会导致核心断裂或条块折断。

- ▶ Ensure that the arrow directions on the cutting disc and on the power tool match.

切割片可以自动打磨。如果切割片的切割效率明显降低，而且进行切割时会出现火花环，则表示切割片已经变钝。如果发生上述情